


# 6<sup>ultra</sup> chamber hand control operation

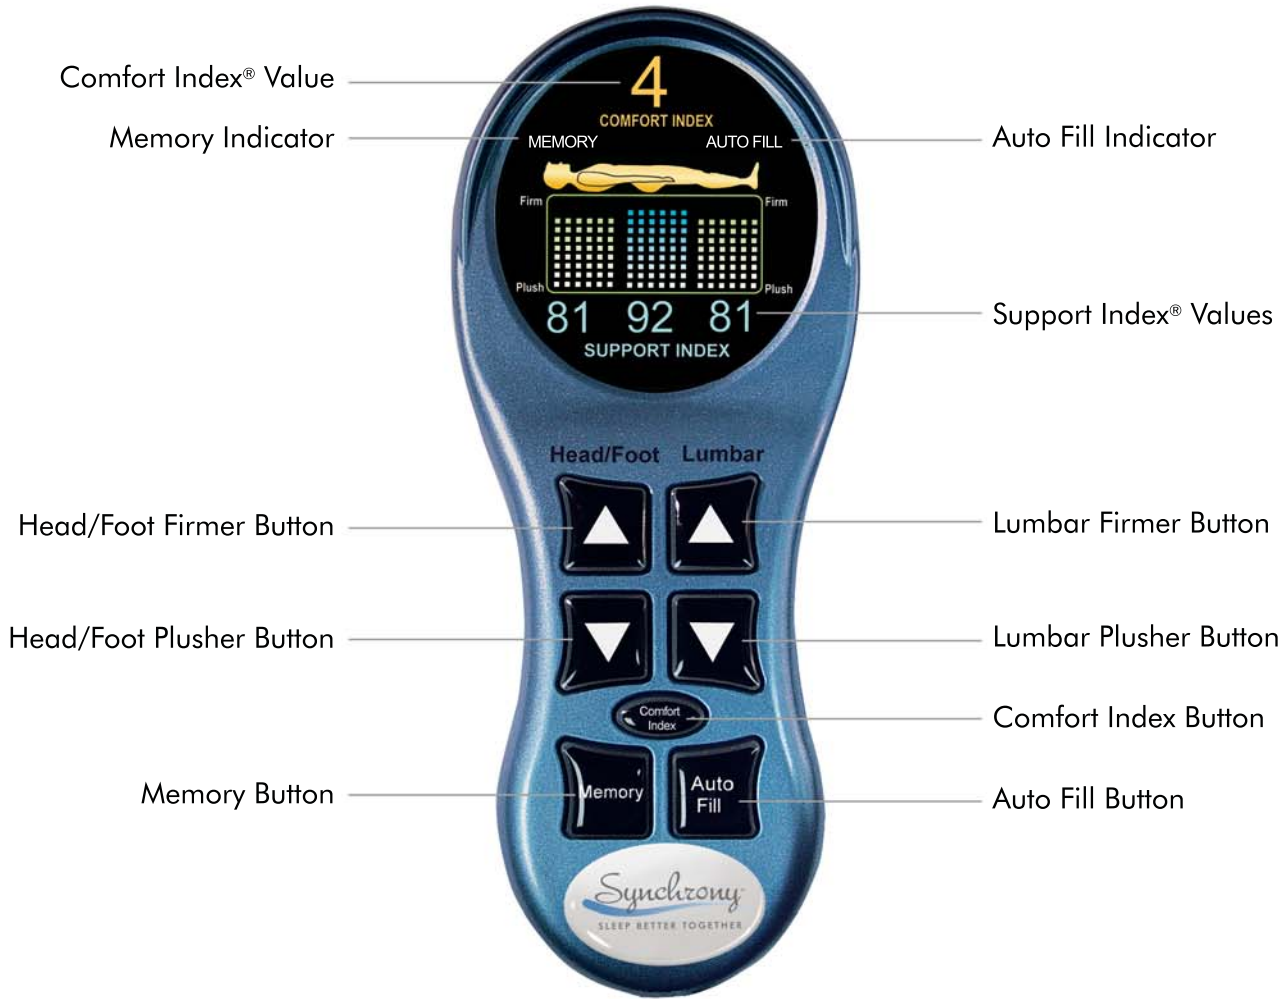

BUTTON	FUNCTION
Head/Foot Firmer ▲ Lumbar Firmer ▲	Briefly PRESS and RELEASE button to view the current Support Index® settings. PRESS and HOLD button to make the bed firmer until comfortable, then release. Your Support Index® will be displayed for 30 seconds for your reference.
Head/Foot Plusher ▼ Lumbar Plusher ▼	Briefly PRESS and RELEASE button to view the current Support Index® settings. PRESS and HOLD button to make the bed plusher until comfortable, then release. Your Support Index® will be displayed for 30 seconds for your reference.
Comfort Index	Used at store level to calculate your Comfort Index® from 1 - 4.
Memory	Place your perfect Support Index® settings into memory by briefly PRESSING and HOLDING until the Memory Indicator Icon flashes. Release button and your saved settings will be displayed for 30 seconds. To return to your memory settings, briefly PRESS and RELEASE and the processor will automatically inflate or deflate the mattress to your last memory setting then automatically shut off. Your Support Index® settings will be displayed for 30 seconds. If at any time you wish to stop the process, briefly press and release any button and the process will stop.
Auto Fill	Briefly PRESS and RELEASE and the air processor will fill the bed until completely full and then automatically shut off. A digital Support Index® of 100% will be displayed for 30 seconds. If at any time you wish to stop the auto fill process, briefly press and release any button and the auto fill process will stop. Using the Auto Fill feature each morning when making the bed will give the bed a fuller appearance.